

INSTALLATION INSTRUCTIONS:

To install the Sharpshooter, simply apply a thin coat of gun oil to the inside of the part. Slide the product over the end of the barrel. The Iron Sight may need to be temporarily removed for the installation. To tune the Sharpshooter for peak performance, shoot groups with the product located $3/4$ " away from the stock on a rifle with a non-floating barrel, and $3/4$ " from the end of the muzzle on a floating barrel. Adjust the Sharpshooter up or down the barrel in $1/2$ " increments to fine-tune. You may need to squirt some gun oil underneath the part to move it.

Image represents installation options for optimum performance.

